


## GN: THRUST CUT NIPPER



**GN-240**

- Two sizes available
- Double-acting operation with tandem cylinders
- Optional magnetic sensors (1)
- Optional blade heating system (2)
- The blades (LA and LB) are available as spare parts
- High temperature insulation

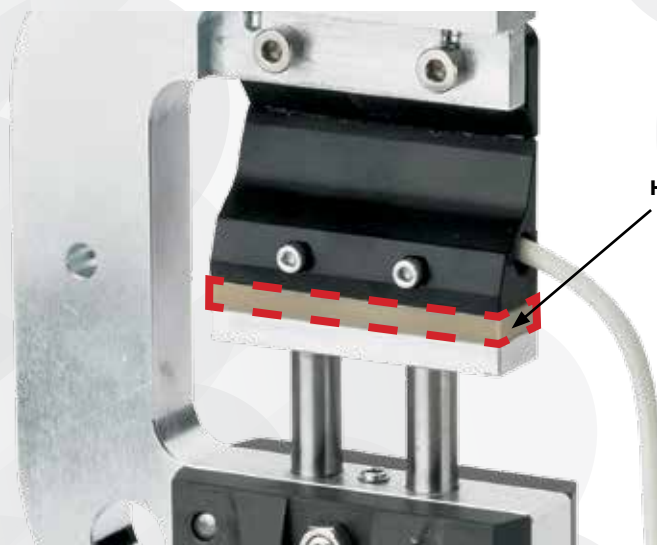

**HIGH TEMPERATURE  
MICA INSULATOR**



# GN: THRUST CUT NIPPER

## SPECIFICATIONS

	GN-240	GN-263
Medium	Filtered, lubricated / non lubricated compressed air	
Pressure range	2 ÷ 6 bar	
Temperature range	5° + 60 °C.	
Maximum stroke	20 mm	32 mm
Piston bore	Ø40 mm	Ø63 mm
Closing force at 6 bar	1470 N	3648 N
Cycle air consumption	75 cm <sup>3</sup>	291 cm <sup>3</sup>
Weight	1330 g	2900 g
High temperature insulation	GN-340-18	GN-363-18
Cartridge resistance + thermocouple (K)	R60K-G	R85K-G
Temperature range	250°C	250°C
Heater control box	CH102-G	CH102-G

